



USERS' MANUAL

Dear users:

Thank you for choosing this section MID product. We sincerely hope that you can get long-term enjoyment. We wish you a better multimedia experience obtained from the product!

This manual contains all the main information is correct at the time of publication. However, as we continue to be updated and improved products, and the software on your device, appearance, function described in this manual may vary slightly.

Note

This manual contains important safety measures and the proper use of the product, in order to avoid the accident, make sure to read the manual carefully before using the product.

Please select the appropriate volume, use the headphones should not be too big volume, and if they feel tinnitus, turn down the volume or stop using it.

Note: the machine can not be used with other models of charger, otherwise they will burn down the machine, and the company shall not be responsible, machines will need original chargers.

Player format or ongoing upload and download. Do not suddenly disconnected, otherwise it may lead to errors in the program.

Erase the memory loss caused because the program is damaged, repair or other reasons, the company assumes no responsibility, please follow the user manual for standard operation.

Do not disassemble the product, do not use alcohol, thinner or benzene to clean the surface of the product.

 
Do not use the product in areas that prohibit the use of electronic equipment, such as aircraft.

Do not use when driving or walking in the street, otherwise it may cause a car accident.

is used for both data transmission and charging.



Appearance and buttons:

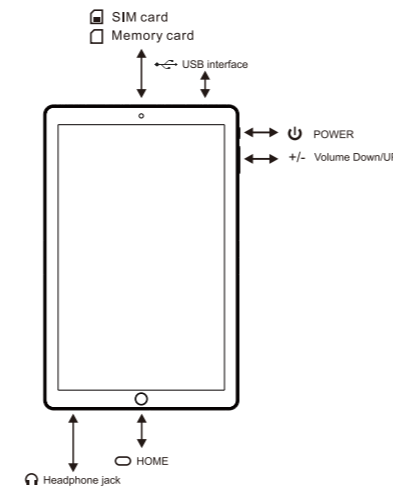

1.1 Touch Panel

10.1 inch touch panel. The option, to click, drag on the touch panel

1.2 Power

Start up: Long press the power button, the system will enter the main interface.
Shutdown: In the main menu interface, press the power button about 5 seconds, the system can hint "power off" option, Click "OK". You can safely shut down.
Lock screen: Short press Power button to lock the screen or unlock.

1.3 Remark

1. When power is empty, system will shut down automatically.
2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system.

1.4 Volume

If you want to turn up or down the volume, please press the up and down volume buttons.

earphone jack:

3.5mm earphone jack.

1.5 TF card

TF card slot is beside the sim card slot, max supporting 32GB T flash card.

1.6 USB

Micro USB jack: you can use it for both charging or make data transaction.

1.7 Sim card

Support dual sim card, 4G/ 3G/ 2G network, take off the cover on the top at the back of the tablet, you will see two sim card slot and one TF card slot.



1.8 Reset

Please use a needle to short press the small whole beside the volume button if you need to reset the tablet.

Remark:

Unless unable to shutdown, otherwise don't use the reset, suggest you to shut down by normal way, if not will easy to damage the machine system.

First Use:

2.1 Battery management and charge

 
Before first use, please set the device's battery is fully charged. Just need to connect the adaptor. First time charging please keep about 5-6 hours.

Remark:

This tablet is using 4000MAH Li poly battery, the device is with micro USB jack to be charged, Charging capacity will be 5V/ 2A. During charging, the battery icon will scroll, when the charging is full, it will turn to green color. Please don't use the device while it is charging.


2.2 connection with PC

Use usb cable to connect the device with the PC, turn on the USB storage mode.

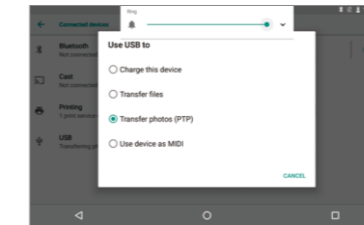

Setting:

 
3.1 Home page

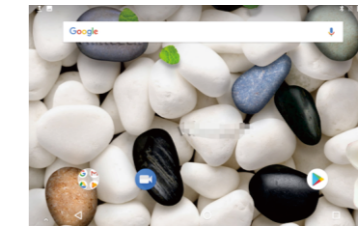



The home page will be like this, slip from the bottom to top, you will get all the applications in view.

3.2 Multi page

 Short press the multi page button, slip the page that you want to close to left side or right side, then it will be closed.

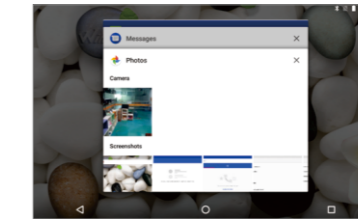

  
3.3 Sound, ring set, notify and screen brightness

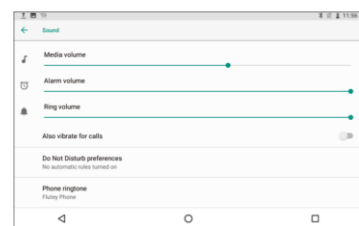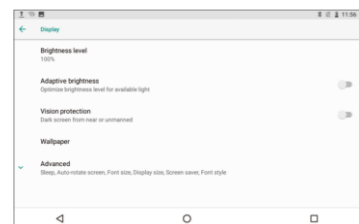

3.4 WIFI and sim card setting



Choose the WIFI you want to connect with, type the password, then you will be connect with WIFI

 Insert the sim card in to the sim card jack, turn on the 4G button, you will get the 4G signal.

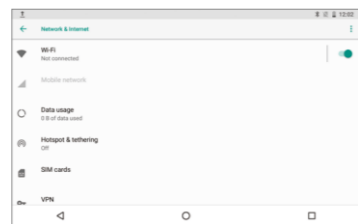


3.5 Language

  Open the setting, choose the language that you want to use. Keep pressing the language that you chose and move to top of the screen, then the language will be settled.

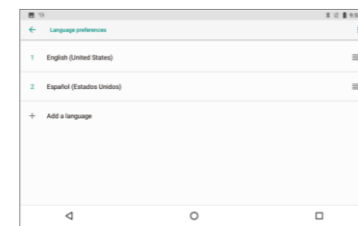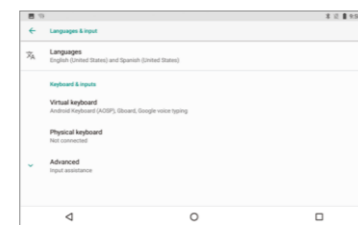

3.6 Date and time setting

 Set date, time. Select time zone and select date format.

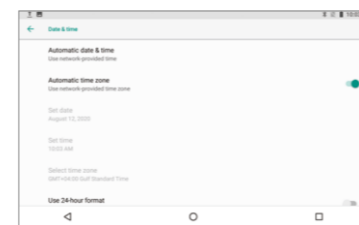

3.7 Software install and manage

This tablet supports the third party applications based on Android platform, most of the applications can be obtained from the internet, to be download into local flash or Micro TF card. This tablet also supports Google Play Store, you can download whatever application you want through Google Play Store directly.



3.8 Recovery

 
This tablet supports recovery, including:

3.8.1 DRM reset

3.8.2 WIFI, Mobile & Bluetooth



3.8.3 Reset app preference

3.8.4 Erase all data (Please consider to use this function, or your tablet will lose all the data used before)

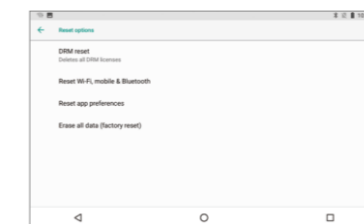

4.0 Phone calling and messages

  This device support dual sim cards, with telephone calling function and short message function. Please use a sim card that is available, then the functions of calling and message will work.

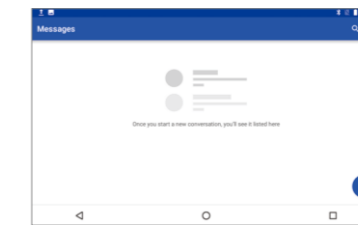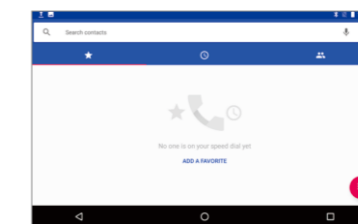

The company reserves the right to improve products, product specifications and design are subject to change without notice!

Note

The operating manual is only for reference, product specifications and appearance are subject to change without notice.

The series of pictures of this operation manual are for reference only.

STATE

Please be sure to use process of its own data backup, loss and damages of personal data caused by the company due to software, hardware malfunction, maintenance, battery replacement or other unforeseen circumstances assumes any responsibility for the loss, and we cannot control the users of this manual may cause misunderstanding, the company will not be liable in accidents that may appear in this manual process responsible for the damage, not caused by third-party claims arising out of the use of the product is responsible for.

Thanks for choosing this device, hope you will enjoy it.

